


Photo

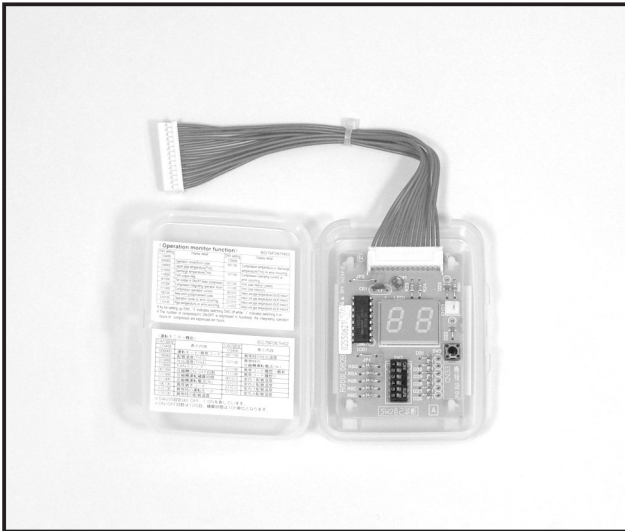

Descriptions

This item is used to display operation and self-diagnosis state.

Applicable Models

- PUZ-ZM Series
- PUZ-M Series [R32 type]
- PUAZ-ZRP Series
- PUAZ-P Series
- PUAZ-SHW Series [R410A type]

Specifications

Power	5V DC (supplied from outdoor unit control board)
Temperature	-20 to 60°C, Humidity: 90% RH or less (no condensation)
External dimensions	69 (W) x 91 (H) x 27 (D) (mm), excluding lead wires
Weight	0.05kg

How to Use / How to Install

- Notes on Use
 - Before installing / removing a control / service tool, make sure that the main power to this unit is turned OFF.
 - The connector for control / service tool has a lock. Connection / removal of the connector must be done with the locking lever pressed.
- How to Use
 1. Connect the control / service tool connector to the [CNM] connector on the outdoor unit control board.
 2. Operating the control / service tool's DIP switch "SW2" causes "LED1" to display the operation state and inspection code description using 2-digit value and symbols. "SW2" setting varies with the unit to be connected. For details of the display content, refer to the appropriate service handbook.
 3. After the control / service tool has been used, remove it from the outdoor unit control board.